

TRIM-TEX

350 Bull™ Arch

Installation Instructions



Product Overview

Trim-Tex 350 Bull Arch is the ultimate bead for finishing archways and the perfect complement to "The Worlds Strongest Bead" our 350 Bull. Unique co-extruded design eliminates notches in the exposed area of the bead and allows 350 Bull Arch to finish archways ranging from a 15" inside to a 20" outside radius.


Be sure to check the Trim-Tex catalog and www.trim-tex.com for all our innovative products.

Installation Instructions


1. Please read the entire instructions before beginning. When matching up 350 Bull Arch to our 350 Bull Bead, align the 2 beads as shown in **Figure 1**. It is important that the edges line up for a smooth transition. Drywall requires $\frac{1}{8}$ " setback.

2. To install 350 Bull Arch, dry fit the bead. Then apply 2 coats of Trim-Tex 847 Spray Adhesive to the drywall. Immediately apply the 350 Bull Arch to the drywall while the spray is still wet. This will allow you to reposition the bead. If the adhesive dries and there is no tack to it, you will need to re-spray the drywall. Once in position, use the Trim-Tex Installation Tool or the handle of your taping knife to pressure the mud leg and the tabs to the drywall. (A FREE tool is included with every purchase of 847 Spray Adhesive.) Staple the mud legs every 6" and staple the tabs minimum every 4". We recommend stapling every tab for the ultimate adhesion. After stapling, apply pressure to the mud leg and tabs once more.

3. Mud as usual. Be sure to use All-Purpose or Multi-Purpose Compound. Do not use Fast Setting Compounds. Add Mud-Max to your drywall compound for the ultimate performance. Prime and paint as usual.

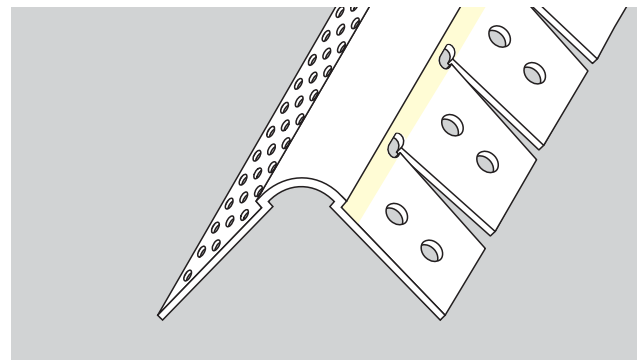

STOCK NUMBER	LENGTH	PCS PER BOX
35028	8'	25
35020	10'	25

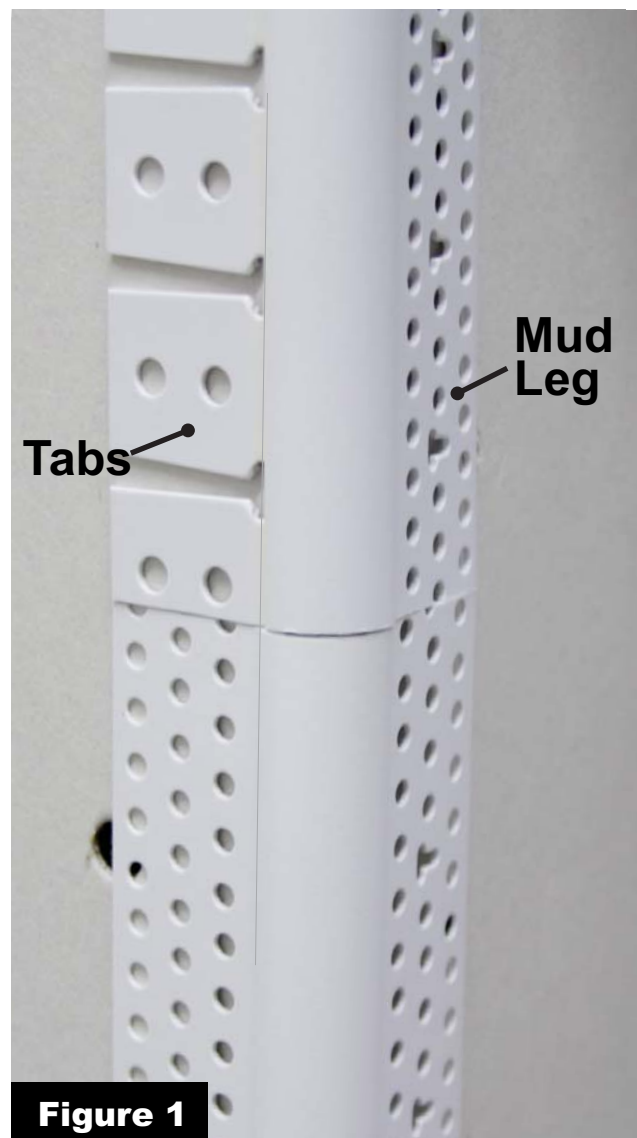

Stay Connected



www.trim-tex.com • 1-800-874-2333